Direct Thermal Desktop Printer



Quick Start Guide





Zebra Technologies | 3 Overlook Point | Lincolnshire, IL OUDD USA zebra.com ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. © 2023 Zebra Technologies Corp. and/or its affiliates. All rights reserved.

IMPORTANT

Go to zebra.com/zd421d-info and install the driver for your printer.





1 Setup

The driver MUST be installed before connecting the printer to the computer, or it will cause complications. If your Microsoft Windows-based computer does not have the driver installed for this printer, download it from zebra.com/zd421d-info and install it before continuing.

After unpacking, make sure you have all items shown below.







Printer

2 Remove Packing

Quick Start Guide

USB Cable





Power Supply

Power Cord



Media not included.



 


ZEBRA




(4) Load Media






Open the printer and remove the packing (1).

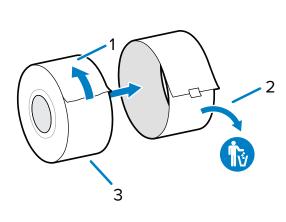

Unroll (1) and discard (2) the outer layer of the media roll (3).

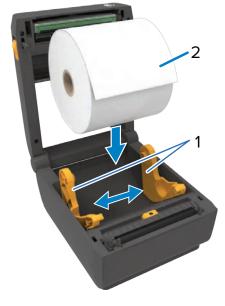

Spread the roll holders open (1) and place the roll (2) into the printer.



Verify the roll spins easily on the holder.

(5) Load Media (continued)



6 Adjust Sensor



(7) Close Printer



Press the media under the guides (1).








Align the sensor to the center of the roll for regular labels (1).

Align the sensor to the edge of the roll for marked labels (1).

Push down on the front edge of the printer until it locks.

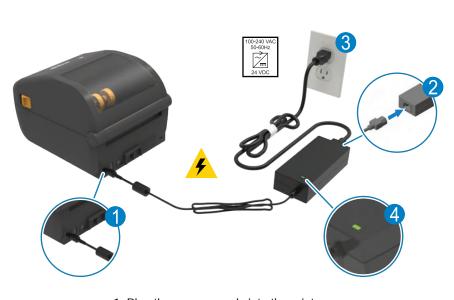

- Plug the power supply into the printer.
 Plug the power cable into the power supply.
 Plug the power cord into an appropriate receptacle.
- 4. Verify that the power supply lights green.



- 1. Connect a USB cable to the printer.
- 2. Connect the other end to your computer.



Press **POWER** (1).

11) Power On (continued)



When the printer is ready, the printer status light turns green (1).

(12) Smart Calibration

Media Out



Press and hold PAUSE (1) and CANCEL (2) for two seconds to line up the labels.

(13) Print Configuration

Cleaning



Press and hold **FEED** (1) and **CANCEL** (2) for two seconds to print a configuration report.

Support and Information













 








When media runs out, the printer and media status lights turn red (1).





Clean the printhead (1) with a cleaning pen (2). Clean from the middle to the outside. Do not use a cleaning pen on the platen.





